



The grounding strap should be located on one of the four available studs

Remove the bolt and washer

Bolt through the eyelet on the strap but do not use the washer.

The strap should run towards the center of the tank and should rest on the ground





## Powerwise Ink Pumps

2700 West 21st Street, Erie, PA 16506 USA Tel: 814 833 3715 Fax: 814 838 3850 e:mail:sales@powerwise.com Website www.powerwise.com